




Hubsan X4 107L Flight Controller Replacement

This is a step by step guide to completely disassembling an X4 107L micro quadcopter.

Written By: Evan Noronha

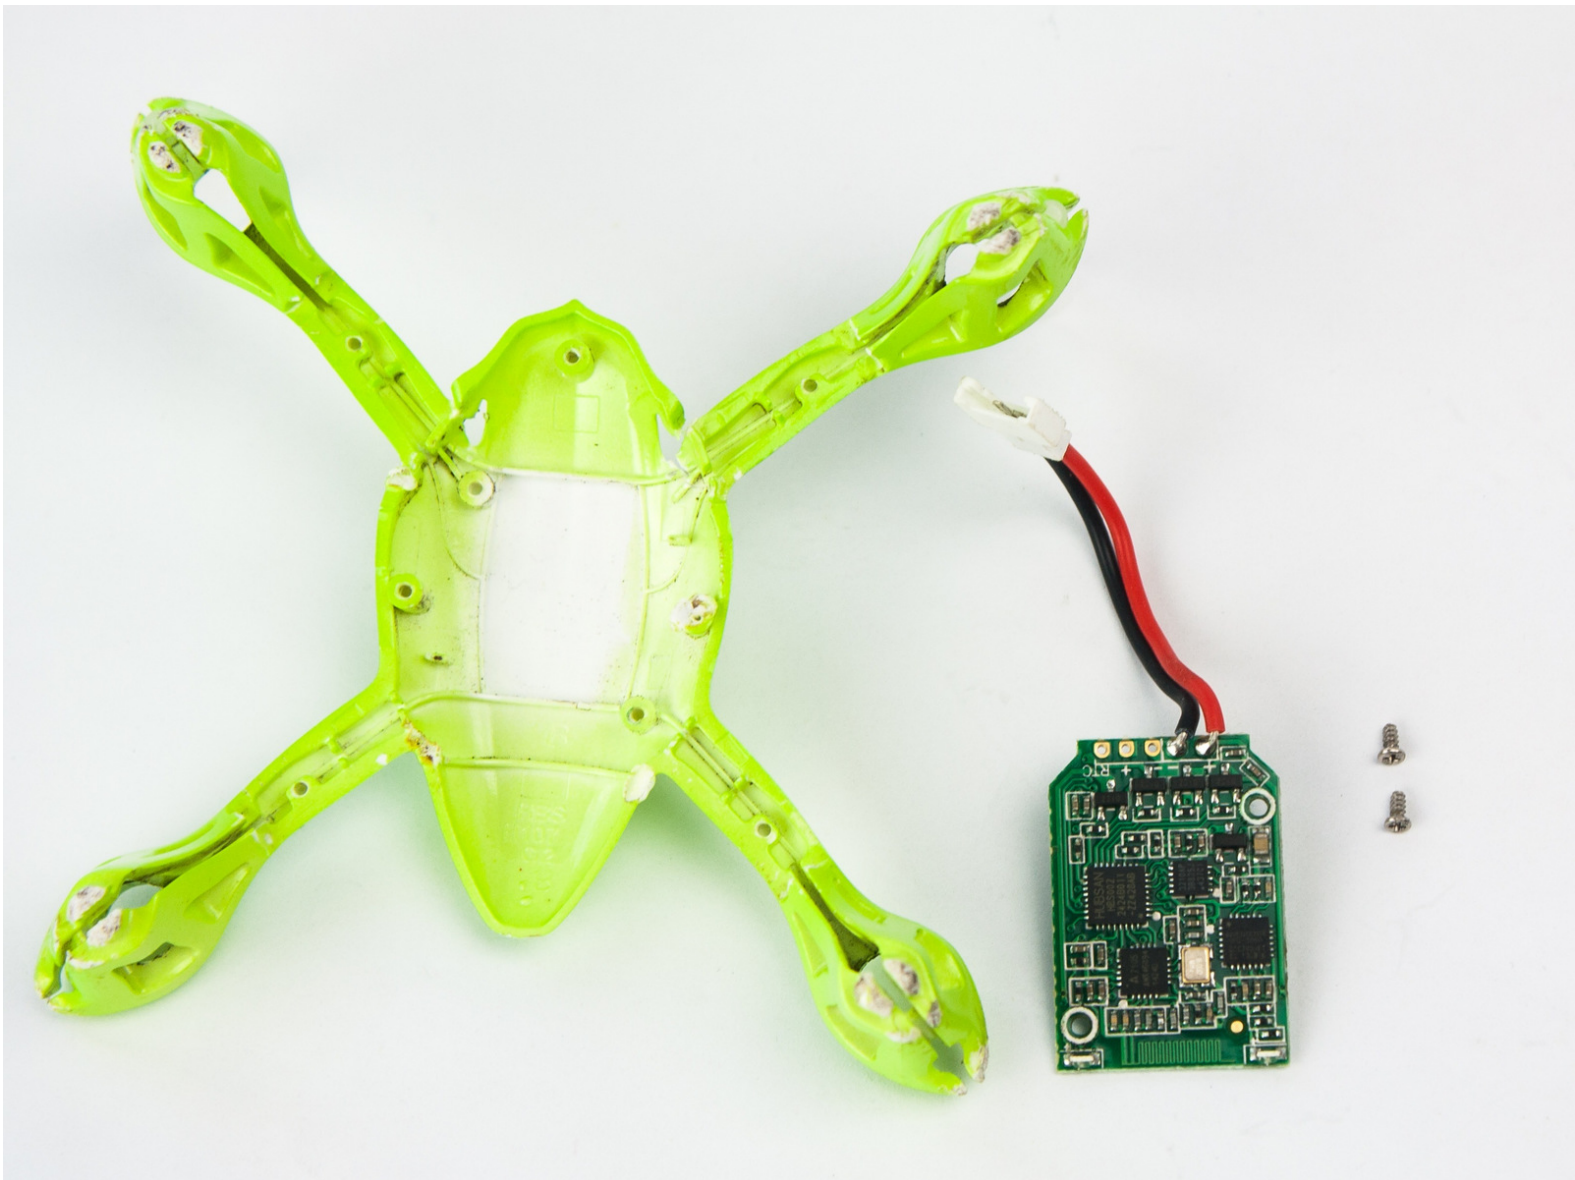

INTRODUCTION

The Hubsan X4 107L is a rugged, entry level quadcopter ideal for RC amateurs learning to fly. This is a complete teardown guide for the X4.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Flush Cutter](#) (1)
 - [Propeller Removal Tool](#) (1)
 - [Tweezers](#) (1)
 - [Soldering Station](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Disconnect and Remove Battery



- Firmly grasp both sides of the battery connector and pull them apart.
 - Grip the battery and slide it out of the quadcopter body.
- ⚠ Do not pull on the wires. This could damage the battery or flight controller.

Step 2 — Remove Shock Absorbers



- Orient the quadcopter so the propellers are on the bottom.
- Remove the rubber shock absorbers from the motor mounts by hand.

Step 3 — Remove Propellers



- Use the prop removal tool to pry the propellers off the motors.
- i** Each propeller and motor arm is labeled either "A" or "B" corresponding to whether the motor spins clockwise or counterclockwise. With the quad oriented with the front facing towards you:
- "A" propellers are on the front left and back right motors.
 - "B" propellers are on the front right and back left motors.

Step 4 — Remove Aftermarket Fasteners



- Use the wire cutter to remove any customized or aftermarket modifications holding the body together.

Step 5 — Remove PH000 Screws



- Use a Phillips #000 screwdriver to remove the three screws securing the lower body to the frame.

Step 6 — Snap Lower Body Out of Place



- Carefully apply upward pressure on one of the motor arms while bending the body downwards to snap the lower body armpiece out of place.
 - Repeat this step for all four arms. The lower body will separate from the main frame after snapping the fourth arm out of place.
- i** You may need to bend the arm quite a bit to snap it out. This is a durability feature that allows the X4 to "crumple" in a crash without breaking.


Step 7 — Desolder Motors from Flight Controller



- Use a soldering iron and solder wick to desolder the four motors from the control board.
- If the connection holds even after removing the solder from the joint, gently pull up on the wire while applying heat to the joint until the wire separates from the PCB.
- ⓘ The motor wires are in either black-white or red-blue pairs.



⚠ CAUTION: Overheating the PCB can damage the traces, making it difficult or impossible to reconnect the components later on. Do not apply too much heat to the board; these traces are especially delicate due to their small size.

Step 8 — Desolder LEDs from Flight Controller

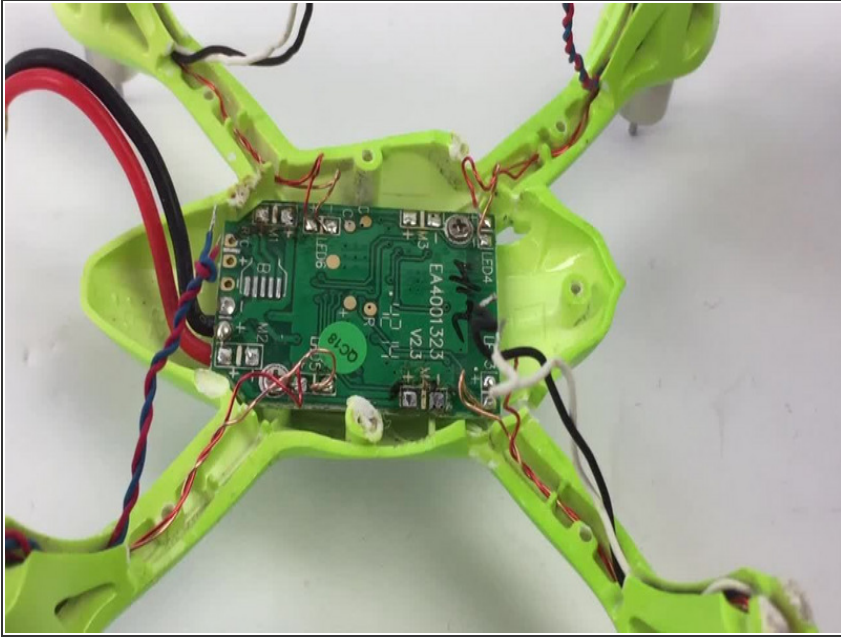


- Using a technique similar to desoldering the motor wires, disconnect the LEDs from the control board.
- ⓘ The LED connections use less solder than the motor joints, so solder wick is optional but not required for this step.
- ★ When reassembling the quadcopter, remember the LED's have red positive leads and bronze negative leads.

Step 9 — Unthread the Wires from the Frame

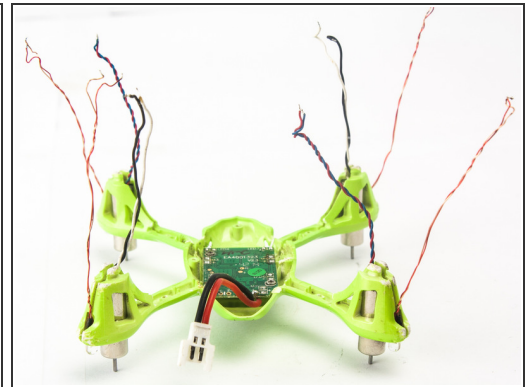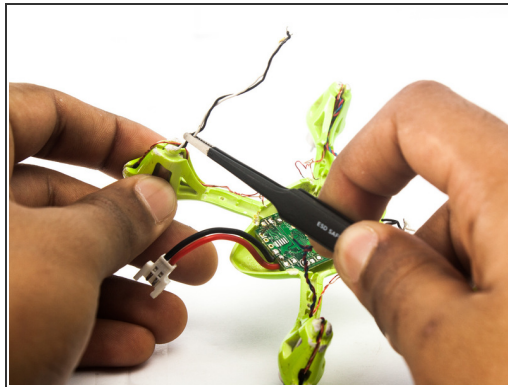


- Use the tweezers to unthread the motor and LED wires from the quadcopter arms.
- ⓘ After unthreading all eight bundles of wires, the LEDs and motors are ready to remove.

Step 10 — Remove Motors

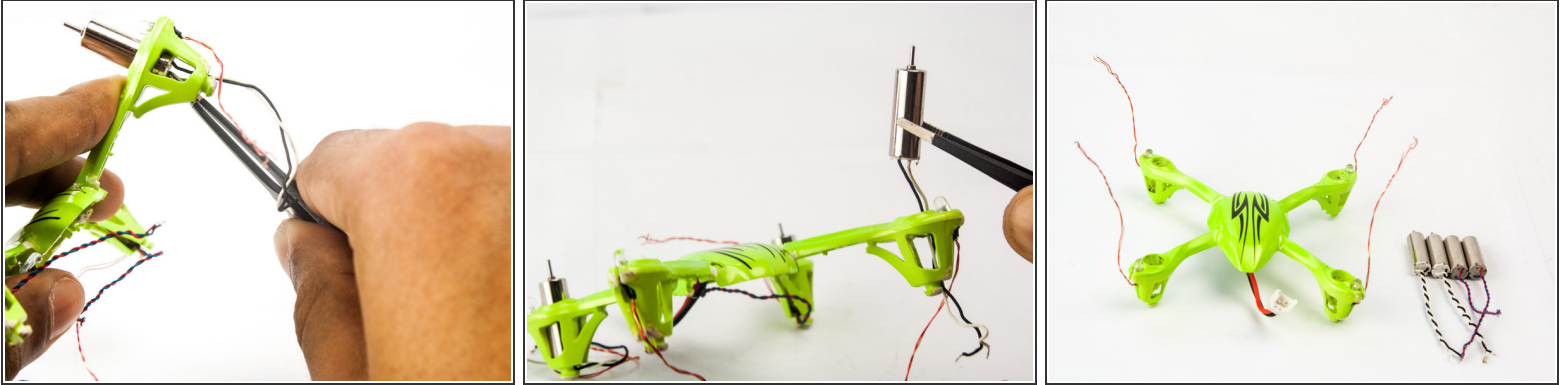


- Use the tweezers to push the motors out of their housings.
- ❗ Both the motor mounts and motors themselves have a small size variance. If it's difficult to push a motor out, ensure the wires are not caught on the frame and gently apply more force from the bottom until the motor begins to slide.
- Once the motor is mostly out of the motor mount, grip it from the top and pull it straight out.

Step 11 — Remove LEDs

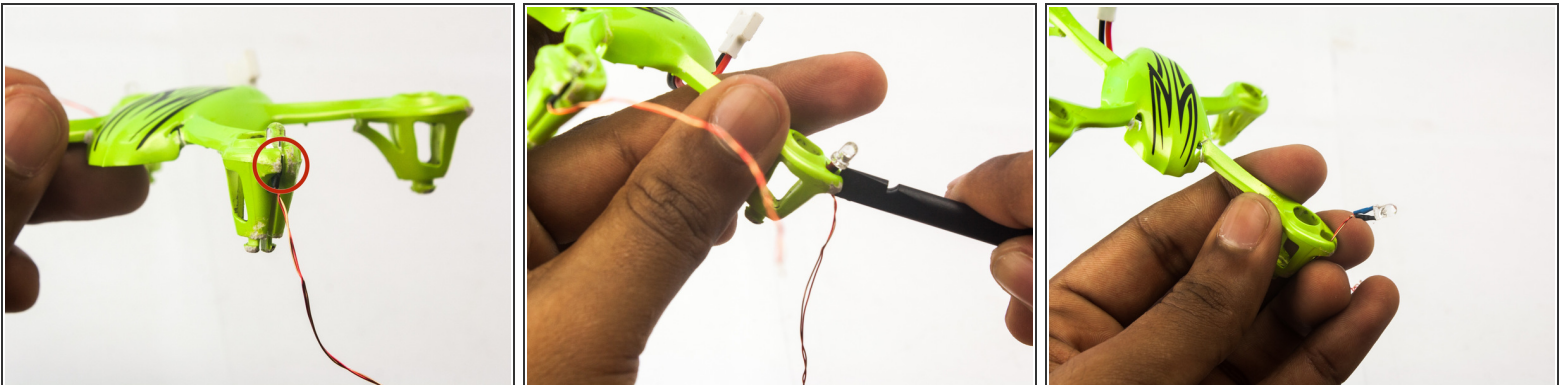


- Remove the LEDs using the spudger to widen their housing and nudge them up.
- To free an LED from its housing, insert the spudger into the top section of the gap in the plastic revealing the side of the LED.
- Simultaneously twist the spudger to widen the housing while pushing the LED up and out of the frame.

Step 12 — Check out the LEDs

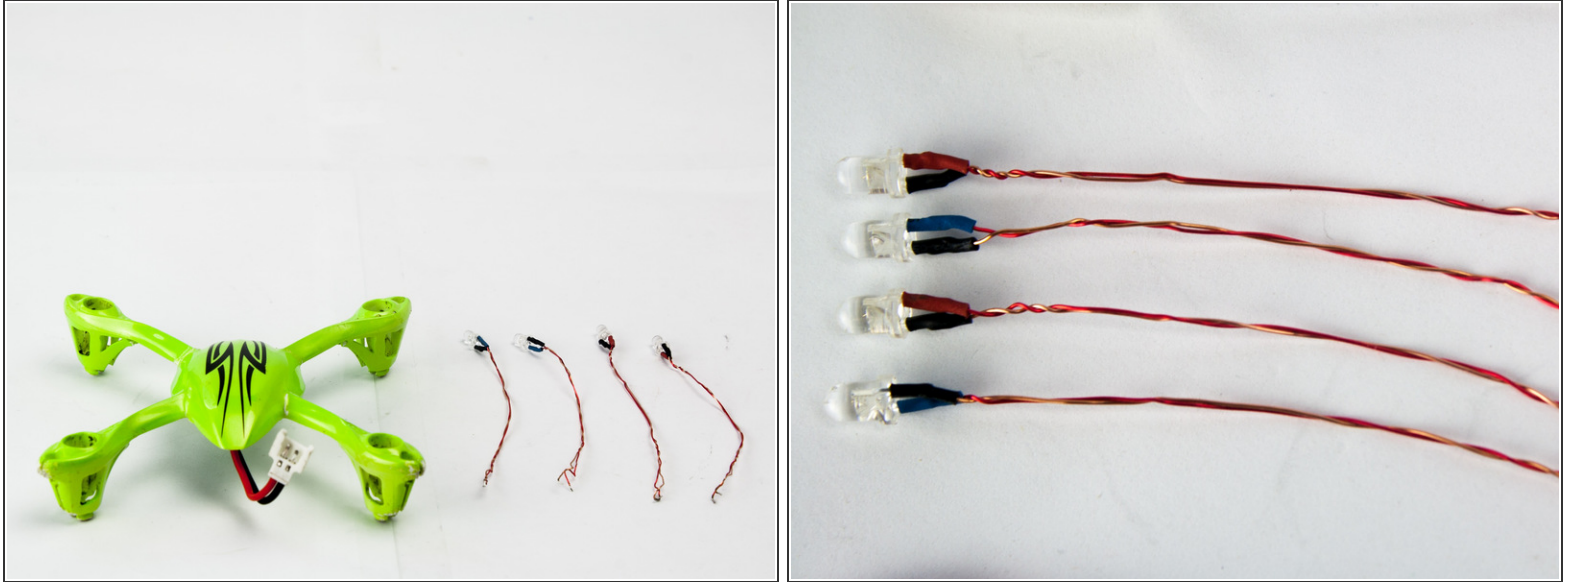



- i** Unlike the motors which had colored wiring to differentiate between CW and CCW spin, both the blue and red LEDs have a red positive leads and a bronze negative lead. Upon closer inspection, it looks like the heat shrink on the positive lead matches the LED color.

Step 13 — Remove Flight Controller

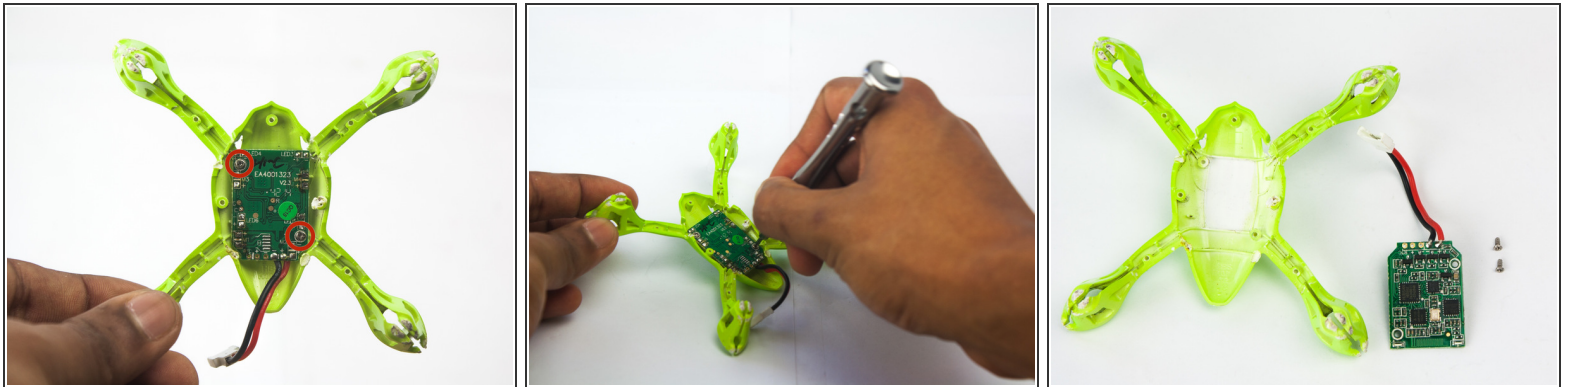


- Use the PH000 driver to remove the two screws securing the flight controller to the frame.
- i** After removing both screws, the flight controller drops freely out of the frame .

Step 14 — Check out the Flight Controller

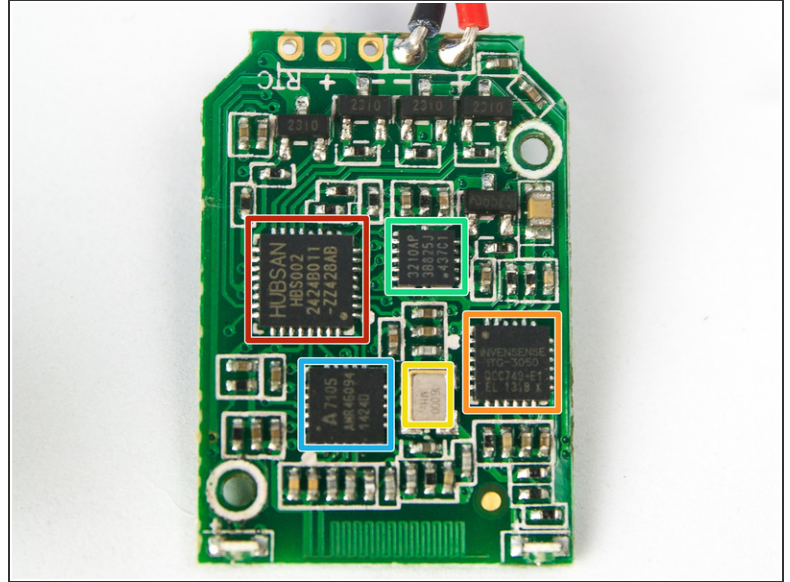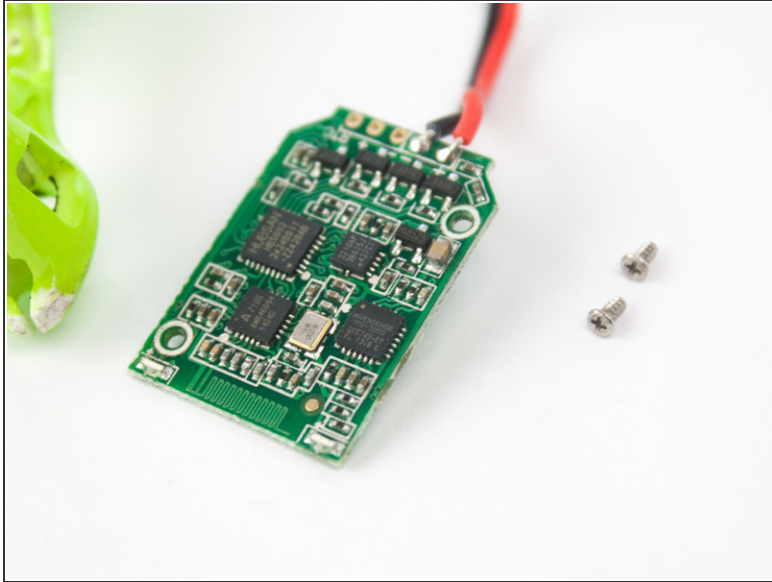

- The Hubsan X4's Flight Controller (aka Control Board) has a handful of neat components that keep the quadcopter in the air:
 - Hubsan HBS002 Processor
 - Invensense ITG-3050 Integrated Triple-Axis Gyroscope
 - 16.000 MHz Quartz Crystal Oscillator
 - 3210AP 3-Axis Accelerometer
 - A7105 2.4GHz Wireless Module

Step 15 — Parts Overview

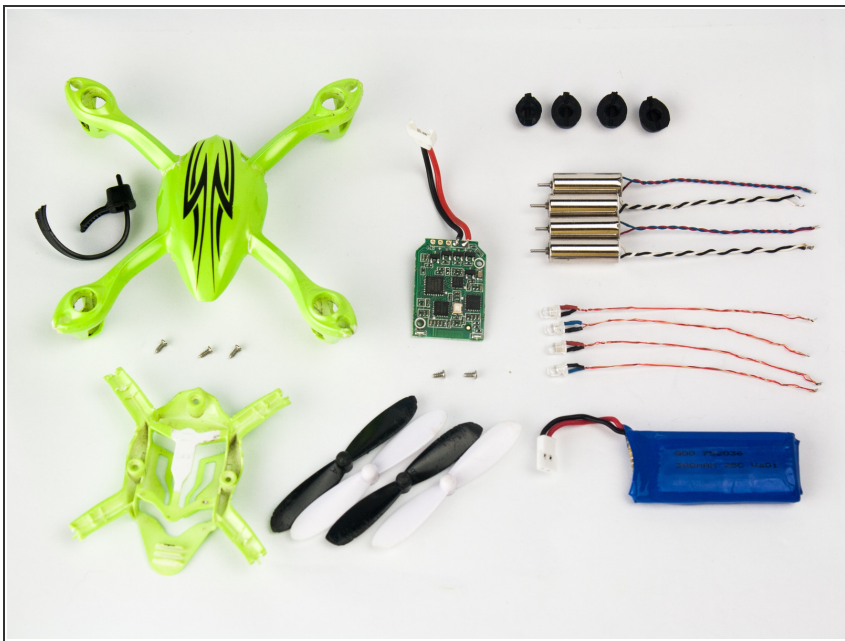

- All done! To reassemble your X4, follow these steps in the reverse order.
- ⓘ This is a good opportunity to test all your LEDs and motors and switch out any faulty components.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:17:44 AM.